99 Washington Street Melrose, MA 02176 Phone 781-665-1400 Toll Free 1-800-517-8431



# Datasheet: FI-500 FiberInspector™ Micro-Fiber Optic Endface Inspection Scope with PortBright™ Illumination.

Datasheet: FI-500 FiberInspector™ Micro-Fiber Optic Endface Inspection Scope with PortBright™ Illumination.

Dirty fiber optic endfaces are the major cause of problems in singlemode and multimode fiber optic systems.

The FI-500 FiberInspector™ Micro removes the hassle associated with inspecting fiber endfaces, especially in low light and high cable density situations.

It is very simple to use:

Simply plug the cable into the FI-500 and touch the AF button. Within seconds, the fiber endface comes into sharp, clear view. And if you're working in a difficult to reach place or you can't get the image to stand still, just touch the pause button to freeze the image.



## **Just right for Troubleshooting**

Today's high density fiber patch panels make inspection a challenge. Finding the cable or port to test can be tough, especially in the low light conditions found in most data centers and wiring closets.

The FI-500 is designed to simplify the inspection process. The built-in PortBright flashlight helps you find the right port or cable. The small-profile probe fits into tight spots, and features pushbutton controls for simple operation. Autofocus provides a sharp view of the endface in under a second, while the pause button freezes the image on the crisp 320 x 240 display for more detailed inspection.

The FI-500 FiberInspector Micro fills the gap between a manual scope and a fully automated inspection scope. The FI-500 has the simplicity and practicality of a manual inspection scope, but with advanced features to reduce troubleshooting and inspection time.

Manual fiber inspection scopes are simple to use, but they don't work well on patch panels or situations where there is a high density of fiber. Holding it up to one eye and closing your other eye is often inconvenient or impractical, especially in a dark room

Fully automatic inspection scopes analyze and grade the cleanliness of fiber connections which is important for many applications, but analysis is usually not needed for quick basic troubleshooting.









Important Benefits	Typical Manual Scopes	FI-500 FiberInspector Micro	Typical Analysis Scope
Illumination of small or dark ports		<b>✓</b>	
Autofocus for quick and stable images*		✓	Model dependent
Compact design to get into tight spaces		✓	Model dependent
Works on patch cords and bulkhead connectors		✓	✓
Wide range of tips to support most connectors		✓	✓
Capture and zoom to see small particles		✓	✓
Endface analysis to highlight dirt			✓
Image storage			✓
Data transfer to PC or cloud			✓
Rugged digital design		✓	<b>✓</b>
Relative cost	Low	Medium	High

<sup>\*</sup>If the APC tip (Angled Physical Contact) is not aligned with connector, the connector or probe may require rotation and repeating auto-focus or manual focus.

# Fast, Easy Viewing of Fiber Endfaces



FI-500 displaying a clean fiber endface



FI-500 displaying a dirty fiber endface



FI-500 provides immediate and in-depth visibility into fiber patch cords and bulkhead connectors.





- 1. Screw-on probe tips to support most connector types.
  - o FI-500 includes 4 UPC tips; SC, LC, 1.25 mm and 2.50 mm.
  - Optional APC tip kit includes 4 APC tips; SC, LC, 1.25 mm and 2.50 mm. Other probe tips available.
- 2. PortBright, a built-in flashlight illuminates dark areas and dense panels.
- 3. Switch on PortBright with a convenient button on the probe.
- 4. Pause button holds the image for viewing when it's hard to get it just right.
- Two second autofocus reduces inspection time and keeps your other hand free. (If the APC tip is not aligned with connector, the connector or probe may require rotation and repeating auto-focus or manual focus.)
- 6. Status bar to see battery charge and other information. Auto power off increases battery life.
- 7. Bright 320 x 240 backlit display.
- 8. Magnification of 200X with 1X, 2X and 4X zoom settings.
- Rugged construction; vibration and drop tested to 1 meter
- Compact design allows you to access dense and crowded panels
- No batteries to change in the probe. Probe is powered by display unit





FI-500

FiberInspector Micro - includes 4 tips (1.25 mm, 2.50 mm, SC, LC), case, rechargeable batteries and universal power adapter



FI-525

FI-500 and Cleaning Kit (NFC-KIT-BOX) and 1.25 mm swabs



FTK1375

FI-500 with SimpliFiber Pro Multimode PMLS kit, VisiFault, and 2 FindFibers



#### FTK1475

FI-500 with SimpliFiber Pro Multimode & Singlemode PMLS, VisiFault, 2 FindFibers, Cleaning kit (NFC-KIT-BOX) and 1.25 mm Swabs



FI-500TP-APC

Set of 4 Angled Physical Contact Tips (1.25 mm, 2.50 mm, SL, LC)



**NFC-KIT-BOX** 

Fiber Optic Cleaning Kit - Includes cleaning cube with wipes, five cards with sealed cleaning zones, solvent pen and 2.5 mm port cleaning swabs.





FI-500TP-SCF
SC bulkhead fiber connectors



**FI-500TP-FCF**FC bulkhead fiber connectors



FI-500TP-STF
ST bulkhead fiber connectors



FI-500TP-LCF

LC bulkhead fiber connectors



FI-500TP-U25F
2.5 mm (SC, FC, ST) fiber patch cords



FI-500TP-U125F

1.25 mm (LC) fiber patch cords



FI-500TP-ASCF
SC APC bulkhead fiber connectors



LC APC bulkhead fiber connectors

FI-500TP-ALCF



FI-500TP-A25F

2.5 mm APC (SC, FC, ST) fiber patch cords



FI-500TP-A125F

1.25 mm APC (LC) fiber patch cords



FI-500TP-AFCF
FC APC bulkhead fiber connectors



FI-500TP-EXTS

Extended LC bulkhead connectors 46 mm



### Specifications

General Specifications				
Temperature range without the power adapter	Operating: 0 °C to +50 °C Storage: -30 °C to +60 °C			
Tenperature range with the power adapter	Operating: 0 °C to +40 °C Storage: -20 °C to +60 °C			
Humidity range	Operating: 0% to 95% °C (0 °C to +50 °C) H non-condensing Storage: 0% to 95% (35 °C to 45 °C) RH non-condensing			
Altitude	Operating: 4,000 meters Storage: 12,000 meters			
Vibration	2 g, 5 Hz to 500 Hz			
Shock	1 meter drop test			
Safety	IEC 61010-1 3rd Edition IEC 62133			

Display				
Magnification	1x, 2x, 4x			
Frames per second	≥12			
Battery type*	Rechargeable NiMH, 2 x 1.2V, 2700 mAh			
Battery life*	3 hours of continuous probe use 6 hours of typical probe use			
Charge time	4 hours minimum			
Power adapter	Input: 100 to 240 VAC±10%, 50/60 Hz Output: 6 VDC, 3 A maximum Class II			
Display	3.2 inch TFT LCD, 320 x 240			
Software upgrades	Upgrades can be installed from a USB drive			
Input	USB 2.0, Type A			
Dimensions	5.5 in x 3.2 in x 1.5 in (14.0 cm x 8.0 cm x 3.9 cm)			
Weight	9.7 oz (275 g)			

<sup>\*</sup>Tested using Gold Peak GH230AAHC batteries. The microscope will operate with alkaline batteries, but they will drain quickly. The display will not try to charge alkaline batteries.

Probe			
Magnification	200x. Zoom function has 1x, 2x and 4x settings		
Camera type	5 Megapixel 1/4-inch CMOS sensor		
Field of view	610 µm x 460 µm		
Resolution	1 µm		
Light source	LED, >100,000 hr life		
Endface illumination	Coaxial blue LED		
Port illumination	2 white LEDs		
Power	Supplied through the USB interface		
Output	Video output through USB 2.0 interface		
Dimensions	4.6 in x 2 in x 0.95 in (117 mm x 51 mm x 23 mm) (length depends on adapter tip)		
Weight	4.4 oz (125 g)(with no adapter tip)		



#### Fiber Inspection and Cleaning

Dirt, dust and other contaminants are the enemies of high-speed data transmission over optical fiber. Today's network applications require more bandwidth than ever, making loss budgets tighter than ever. Hence, it is critical that all optical connections are free of contaminants to avoid having application performance issues.

#### Eliminate the #1 cause of fiber failure

In a survey of installers and network owners commissioned by Fluke Networks, endface contamination was found to be the leading cause of fiber failures. Dirt and contaminants cause insertion loss and back-reflection that inhibit the light transmission and raises havoc with transceivers. And because dirt can migrate from one endface to another upon mating, both sides of any connection must be inspected. Further, mating contaminated connectors can cause permanent damage as microscopic debris is crushed between endfaces in physical contact. Therefore, you must always inspect and clean before mating as a preventative measure and not only after experiencing problems. Even factory terminated patch cords or pigtails must be inspected as protective caps do not keep endfaces clean. Avoiding this common cause of failure starts with inspecting the endface and eliminating any contamination before insertion into a bulkhead or piece of equipment.

#### Range of inspection options

With a range of solutions, Fluke Networks always has the right tool for you to easily inspect endfaces on a wide variety of connectors.



Fiber Test, Inspection, Cleaning and Certification	SimpliFiber® Pro Test Kits	CertiFiber® Pro OLTS	MultiFiber™ Pro MPO Power Meter	VisiFault™ Visual Fault Locator	Fiber QuickMap™ and OneShot™ PRO	FI-500 FiberInspector™ Micro	FI-7000 FiberInspector™ Pro
	3465.						
One button operation				~	~	<b>✓</b>	
Locate faults				~	~		
Fiber length					~		
Check connectivity	~	~	~	~	~		
Check polarity	~	~	~	~			
Optical power measurement	~	~	~				
Encircled flux compliant	~	~	~				
Dual-fiber loss testing		~					
MPO fiber testing			~				<b>✓</b>
Pass/fail results		~	~				<b>√</b>
View fiber bulkhead and endfaces						<b>✓</b>	✓ + MPO
Capture and analyze bulkhead and endfaces							<b>✓</b>
PortBright illumination						<b>√</b>	
Autofocus						<b>√</b>	

